



Custom oscillator for KORG logue SDK synthesizers

Operations Manual

v.1.8-0

Contents

Contents	1
Introduction	2
Quick start	3
Obtaining the oscillator with custom voices	3
Changing oscillator custom parameters	4
Features	5
Oscillator variations	5
Velocity	5
Share and Alt assign	5
Chromatic and kit modes	6
Banks and voices	6
Zones	6
Algorithms list	7
Waveforms list	8
Custom parameters list	9
Known issues and limitations	14
Q & A	16

Introduction

FM64 is a set of custom oscillator variations for KORG prologue, minilogue XD and NTS-1 synthesizers that reproduces Yamaha DX / TX series 6-operator FM synthesis. The oscillator must be prepopulated with the Yamaha DX7 voice banks of your choice using the online constructor (see in the next section) before uploading to the synthesizer. For information on how to upload a custom oscillator to the synthesizer and how to activate it, please refer to the Synthesizer Owner's Manual and Sound Librarian Owner's Manual for your KORG synthesizer model.

Quick start

The raw oscillator file has no banks inside and won't produce any sound. To make the oscillator work you must first populate it with the voice banks.

Obtaining the oscillator with custom voices

1. Navigate to the [online constructor](#) web page.
2. Select your KORG synthesizer model to define the target format of the oscillator file.
3. Locate the FM64 oscillator row by the column **NAME**
4. Check the **SIZE** column of this row, the last multiplier is the maximum number of voice banks this oscillator can contain.
5. Click the **Upload** button located in the **CUSTOM DATA** column of this row.
6. In the file open dialog select one to several (up to obtained in step 4) voice bank files.
7. Check the **CUSTOM NAME** cell in this row. This name is generated from the names of the uploaded banks and you can alter it now. This name will be displayed by the Librarian and your synthesizer.
8. Click the **Download** button located in the **CUSTOM UNIT** cell of this row.
9. Now you can upload the oscillator file to your KORG synthesizer with the Librarian application.

The screenshot shows the 'prologue' online constructor interface. At the top, there are tabs for 'minilogue.xd' and 'NTS-1 digital'. A red circle with the number '2' points to the 'NTS-1 digital' tab. Below the tabs is a table of oscillators. The table has columns: NAME, VERSION, API, SHAPE, ALT, PARAM 1, PARAM 2, PARAM 3, PARAM 4, PARAM 5, PARAM 6, CUSTOM DATA, CUSTOM NAME, CUSTOM UNIT, SIZE, and DESCRIPTION. The row for 'FM64' is highlighted. Red circles with numbers 5, 7, 8, and 4 point to the 'CUSTOM DATA', 'CUSTOM NAME', 'CUSTOM UNIT', and 'SIZE' columns of the 'FM64' row, respectively. The 'CUSTOM DATA' column contains an 'Upload' button. The 'CUSTOM NAME' column contains a text input field. The 'CUSTOM UNIT' column contains a 'Download' button. The 'SIZE' column shows '4096 x 4'.

NAME	VERSION	API	SHAPE	ALT	PARAM 1	PARAM 2	PARAM 3	PARAM 4	PARAM 5	PARAM 6	CUSTOM DATA	CUSTOM NAME	CUSTOM UNIT	SIZE	DESCRIPTION
1. FM64	1.5.0	1.5.0	Velocity	FB scale	Voice 1	Bank	Shape Assign	All Assign	S.LFO Target	Algorithm	Upload		Download	4096 x 4	Yamaha DX7100/11 series voice banks
2. FM64	1.7.0	1.5.0	Velocity	FB scale	Voice 1	Det scal All	Rel offs All	Lvl offs Car	Algorithm	Lvl offs Mod	Upload		Download	4096 x 5	Yamaha DX7 series voice banks
3. FM66	1.7.0	1.5.0	Velocity	FB scale	Voice 1	Det scal All	Rel offs All	Lvl offs Car	Algorithm	Waveform D-M	Upload		Download	4096 x 4 512 x 5	Yamaha DX7 series voice banks Plus 50 set PCM waveforms
4. FM67	1.7.0	1.5.0	Velocity	FB scale	Voice 1	Det scal All	Rel offs All	Lvl offs Car	Algorithm	Waveform D-M	Upload		Download	4096 x 2 512 x 5	Yamaha DX7 series voice banks Plus 50 set PCM waveforms
5. FM68	1.5.0	1.5.0			Voice	Bank	Shape Assign	All Assign	S.LFO Target	Algorithm	Upload		Download	4096 x 2 1024 x 5	Yamaha DX7 series voice banks Plus 50 set PCM waveforms
6. FM69	1.7.0	1.5.0	Velocity	FB scale	Transpse 1	Voice Shift1	Split Point1	Voice Shift2	Split Point2	Voice Shift3	Upload		Download	4096 x 5	Yamaha DX7 series voice banks
7. Martheus	1.0.1	1.5.0			Mode	LFOX	LFOY	LFO Trigger	Interpolate		Upload		Download	16384 x 1	Pure square, p. line smoothed
8. Anthologie	0.7.0	1.5.0			Prog	Sub	Mode	AG 1	AG 2		Upload		Download	1024 x 20	Korg legacy series program data libraries
9. —	—	—													
10. —	—	—													
11. —	—	—													
12. —	—	—													
13. —	—	—													
14. —	—	—													
15. —	—	—													
16. —	—	—													

Changing oscillator custom parameters

1. Proceed with steps 1 thru 7 of the previous section.
2. Click on one of the highlighted values in the columns **SHAPE**, **ALT**, **PARAM1**, **PARAM 2**, **PARAM 3**, **PARAM 4**, **PARAM 5**, **PARAM 6** of this row.
3. From the popup menu select the desired custom parameter for the parameter selected in step 2. You need to scroll with the mouse wheel to reach all of the available custom parameters.
4. Repeat steps 2 and 3 for other oscillator parameters you wish to reassign.
5. Proceed with steps 8 and 9 of the previous section.

The screenshot shows the 'prologue' software interface with the 'USER OSCILLATORS' table. The table has columns: NAME, VERSION, API, SHAPE, ALT, PARAM 1, PARAM 2, PARAM 3, PARAM 4, PARAM 5, PARAM 6, CUSTOM DATA, CUSTOM NAME, CUSTOM UNIT, SIZE, and DESCRIPTION. Row 2 (FMS4) has 'Velocity' in the SHAPE column and 'FB scale' in the ALT column. A red circle '2' is above the 'PARAM 3' column. A red circle '3' is on the dropdown menu for 'Velocity' in row 2, which lists various custom parameters like 'Voice 1', 'Voice 2', 'Voice 3', 'Split Point1', 'Split Point2', 'Transpore 1', 'Transpore 2', 'Transpore 3', 'Voice Shift1', 'Voice Shift2', 'Voice Shift3', 'Shape Assign', 'Alt Assign', 'FB offset', 'FB scale', 'Algorithm', 'Lvl offs All', 'Lvl offs Car', and 'Lvl offs Mod'.

NAME	VERSION	API	SHAPE	ALT	PARAM 1	PARAM 2	PARAM 3	PARAM 4	PARAM 5	PARAM 6	CUSTOM DATA	CUSTOM NAME	CUSTOM UNIT	SIZE	DESCRIPTION
1	FMS3	1.5.0	1.5.0		Voice	Bank	Shape Assign	Alt Assign	S.LFO Target	Algorithm	Upload		Download	4096 x 4	Yamaha DX2/DX2T1 voices voice banks
2	FMS4	1.7.3	1.5.0	Velocity	FB scale	Voice 1	Det scal All	Rot offs All	Lvl offs Car	Algorithm	Upload		Download	4096 x 5	Yamaha DX7 voices voice banks
3	FMS6	1.7.3	1.5.0	Velocity	FB scale						Upload		Download	4096 x 4	Yamaha DX7 voices voice banks
4	FMS7	1.7.3	1.5.0	Velocity	FB scale						Upload		Download	4096 x 3	Yamaha DX7 voices voice banks
5	FMS8	1.5.0	1.5.0								Upload		Download	4096 x 2	Yamaha DX7 voices voice banks
6	FMS9	1.7.3	1.5.0	Velocity	FB scale						Upload		Download	4096 x 5	Yamaha DX7 voices voice banks
7	Morpheus	1.0.1	1.5.0								Upload		Download	16384 x 1	Raw sample, p-freq recorded
8	Anthologan	0.7.6	1.5.0								Upload		Download	1024 x 25	King's Logos voices program data libraries
9	---	---	---												
10	---	---	---												
11	---	---	---												
12	---	---	---												
13	---	---	---												
14	---	---	---												
15	---	---	---												
16	---	---	---												

Features

Oscillator variations

Custom oscillators are limited both in space and performance so it is not possible to fit all the features in the single oscillator. For the enhanced creativity there are several precompiled oscillator variations with different sets of features. The following table summarizes differences between variations:

Feature \ Oscillator	FM64	FM66	FM67	FM68	FM69
Algorithm count	85	85	85	85	85
Voice bank count	5	4	3	2	5
Waveform count	1	8	16	1	1
Custom parameters count	126	136	136	126	126
Waveform customization		+	+		
Chromatic mode	+	+	+	+	
Kit mode	+	+	+	+	+
AMP LUT depth x width (bits)	11 x 16	11 x 16	11 x 16	13 x 16	11 x 16

Velocity

Velocity is not passed natively to the custom oscillators. To control the voice velocity, the custom parameter is used. When Velocity is assigned to the Shape or Alt (Shift + Shape), the enhanced 10-bit precision will be used. By default velocity is assigned to the Shape knob. When Velocity is assigned to the oscillator parameter knob, it will have 7-bit precision and be limited to 100, similar to the first generation of Yamaha DX / TX series synthesizers.

Share and Alt assign

Shape Assign and Alt Assign custom parameters allows to assign any of the existing custom parameters to the Shape or Alt (Shift + Shape) respectively. Custom parameter numbers are specified in the [Custom parameters list](#). Since Shape and Alt (Shift + Shape) are unipolar, positive custom parameter number only affects bipolar custom parameter value in a positive

range and negative custom parameter number affects bipolar custom parameter in a negative range.

Chromatic and kit modes

There are two modes available in the oscillators depending on the variation. The chromatic mode is a standard mode for the keyboard instrument when keys controls the pitch of the oscillator, i.e. plays notes of the same voice. The kit mode is normally for drums, when each key plays different voice.


Banks and voices

For negative voices, banks are wrapped backwards, starting from the maximum available bank for the current oscillator variation regardless of the number of banks that uploaded into this oscillator in the online constructor. In the table below you can find the actual bank and voice mapping:

Banks \ Voice	-96...-65	-64...-33	-32...-1	0	1...32	33... 63	64...96
1	Bank 1	Bank 1	Bank 1	Kit mode	Bank 1	Bank 1	Bank 1
2	Bank 2	Bank 1	Bank 2	Kit mode	Bank 1	Bank 2	Bank 1
3	Bank 1	Bank 2	Bank 3	Kit mode	Bank 1	Bank 2	Bank 3
4	Bank 2	Bank 3	Bank 4	Kit mode	Bank 1	Bank 2	Bank 3
5	Bank 3	Bank 4	Bank 5	Kit mode	Bank 1	Bank 2	Bank 3
6	Bank 4	Bank 5	Bank 6	Kit mode	Bank 1	Bank 2	Bank 3

Zones

It is possible to split the keyboard to up to three zones and assign different voices to each of them. Split points determines the edge notes between two neighbor zones. Relative position of zones and split points are shown below:

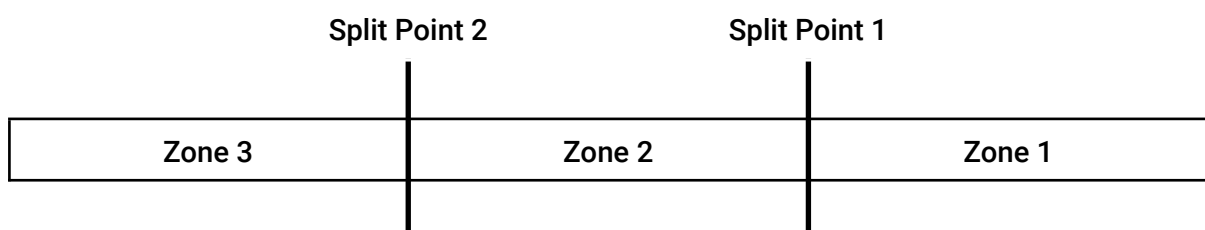

Algorithms list

All oscillator variations support 32 Yamaha DX7 and 8 additional KORG opsix [algorithms](#). There are also 45 Yamaha SY77 [algorithms](#) supported with the limitation of a single feedback. Voice algorithm can be altered with custom parameters.

FM64	DX7
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20 ⁽¹⁾

FM64	DX7
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33 ⁽²⁾
34	34 ⁽²⁾
35	35 ⁽²⁾
36	36 ⁽²⁾
37	37 ⁽²⁾
38	38 ⁽²⁾
39	39 ⁽²⁾
40	40 ⁽²⁾

FM64	SY77
41	1
42	2
43	3
44	4
45	5
46	6
47	7
48	8
49	9
50	10
51	11
52	12
53	13
54	14
55	15
56	16
57	17
58	18
59	19
60	20
61	21
62	22
63	23

FM64	SY77
64	24
65	25
66	26
67	27
68	28
69	29
70	30
71	31
72	32
73	33
74	34
75	35
76	36
77	37
78	38
79	39
80	40
81	41 ⁽¹⁾
82	42
83	43 ⁽³⁾
84	44
85	45

⁽¹⁾ : algorithms 20 and 81 are the same


⁽²⁾ : algorithms 33...40 are from KORG opsix

⁽³⁾ : only single feedback from operator 5 is routed to operator 6


Waveforms list

Depending on the variation, an oscillator can support more than just one sine wave. Several variations also support waveform customization, that means they can be also altered with the online constructor. Waveforms can be altered with the custom parameters.

FM66 variant is preloaded waveforms similar to Yamaha DX11 / TX81Z:

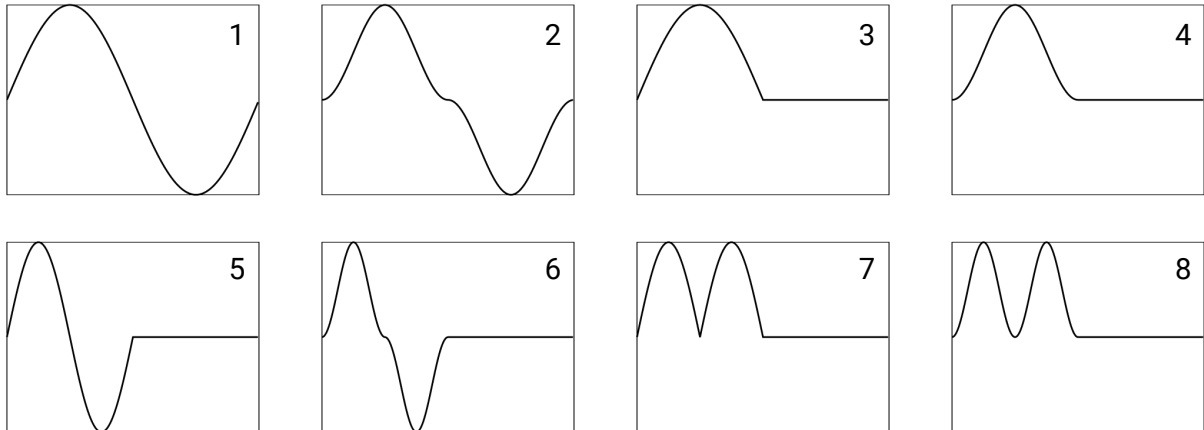

FM67 variant is preloaded with waveforms similar to Yamaha SY77 / TG77 / SY99:

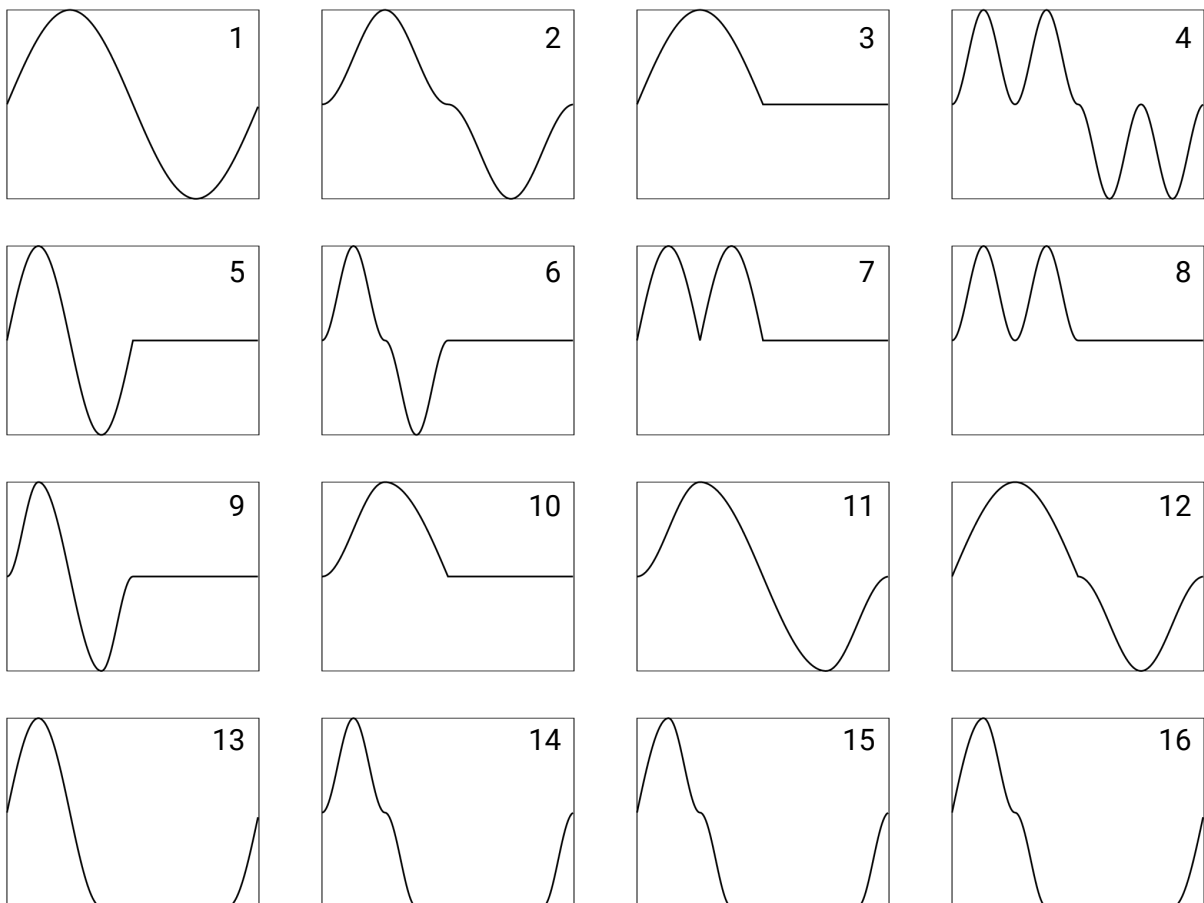

Custom parameters list

#	Custom param	Range	Description
0	Velocity	0...127 ⁽¹⁾	Note velocity
1	Voice 1	-96...96	Voice for zone 1
2	Voice 2	-96...96	Voice for zone 2
3	Voice 3	-96...96	Voice for zone 3
4	Split Point1	1...101 ⁽²⁾	Split point between zone 1 and 2
5	Split Point2	1...101 ⁽²⁾	Split point between zone 2 and 3
6	Transpose 1	-99...100 ⁽²⁾	Transpose for zone 1
7	Transpose 2	-99...100 ⁽²⁾	Transpose for zone 2
8	Transpose 3	-99...100 ⁽²⁾	Transpose for zone 3
9	Voice Shift1	-99...100	Voice shift for zone 1
10	Voice Shift2	-99...100	Voice shift for zone 2
11	Voice Shift3	-99...100	Voice shift for zone 3
12	Shape Assign	-99...99	Assign custom parameter # to Shape
13	Alt Assign	-99...99	Assign custom parameter # to Alt (Shift + Shape)
14	FB offset	-99...100 ⁽³⁾	Feedback offset
15	FB scale	-99...100 ⁽⁴⁾	Feedback multiplier
16	FB route	0...66 ⁽⁵⁾	Feedback route
17	Alg select	0...85 ⁽⁶⁾	Algorithm select
18	Alg offset	-84...84	Algorithm offset
19	Lvl offs All	-99...99	Level offset for all operators
20	Lvl offs Car	-99...99	Level offset for carriers
21	Lvl offs Mod	-99...99	Level offset for modulators
22	Lvl offs Op1	-99...99	Level offset for operator 1
23	Lvl offs Op2	-99...99	Level offset for operator 2
24	Lvl offs Op3	-99...99	Level offset for operator 3
25	Lvl offs Op4	-99...99	Level offset for operator 4
26	Lvl offs Op5	-99...99	Level offset for operator 5

27	Lvl offs Op6	-99...99	Level offset for operator 6
28	Lvl scal All	-99...100 ⁽⁴⁾	Level multiplier for all operators
29	Lvl scal Car	-99...100 ⁽⁴⁾	Level multiplier for carriers
30	Lvl scal Mod	-99...100 ⁽⁴⁾	Level multiplier for modulators
31	Lvl scal Op1	-99...100 ⁽⁴⁾	Level multiplier for operator 1
32	Lvl scal Op2	-99...100 ⁽⁴⁾	Level multiplier for operator 2
33	Lvl scal Op3	-99...100 ⁽⁴⁾	Level multiplier for operator 3
34	Lvl scal Op4	-99...100 ⁽⁴⁾	Level multiplier for operator 4
35	Lvl scal Op5	-99...100 ⁽⁴⁾	Level multiplier for operator 5
36	Lvl scal Op6	-99...100 ⁽⁴⁾	Level multiplier for operator 6
37	KLS offs All	-99...99	Keyboard level scaling offset for all operators
38	KLS offset Car	-99...99	Keyboard level scaling offset for carriers
39	KLS offset Mod	-99...99	Keyboard level scaling offset for modulators
40	KLS offset Op1	-99...99	Keyboard level scaling offset for operators 1
41	KLS offset Op2	-99...99	Keyboard level scaling offset for operators 2
42	KLS offset Op3	-99...99	Keyboard level scaling offset for operators 3
43	KLS offset Op4	-99...99	Keyboard level scaling offset for operators 4
44	KLS offset Op5	-99...99	Keyboard level scaling offset for operators 5
45	KLS offset Op6	-99...99	Keyboard level scaling offset for operators 6
46	KLS scal All	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for all operators
47	KLS scal Car	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier carriers
48	KLS scal Mod	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier modulators
49	KLS scal Op1	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for operator 1
50	KLS scal Op2	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for operator 2
51	KLS scal Op3	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for operator 3
52	KLS scal Op4	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for operator 4
53	KLS scal Op5	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for operator 5
54	KLS scal Op6	-99...100 ⁽⁴⁾	Keyboard level scaling multiplier for operator 6
55	KVS offs All	-99...100 ⁽³⁾	Key velocity sensitivity offset for all operators
56	KVS offs Car	-99...100 ⁽³⁾	Key velocity sensitivity offset for carriers

57	KVS offs Mod	-99...100 ⁽³⁾	Key velocity sensitivity offset for operators
58	KVS offs Op1	-99...100 ⁽³⁾	Key velocity sensitivity offset operator 1
59	KVS offs Op2	-99...100 ⁽³⁾	Key velocity sensitivity offset operator 2
60	KVS offs Op3	-99...100 ⁽³⁾	Key velocity sensitivity offset operator 3
61	KVS offs Op4	-99...100 ⁽³⁾	Key velocity sensitivity offset operator 4
62	KVS offs Op5	-99...100 ⁽³⁾	Key velocity sensitivity offset operator 5
63	KVS offs Op6	-99...100 ⁽³⁾	Key velocity sensitivity offset operator 6
64	KVS scal All	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for all operators
65	KVS scal Car	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for carriers
66	KVS scal Mod	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for modulators
67	KVS scal Op1	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for operator 1
68	KVS scal Op2	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for operator 2
69	KVS scal Op3	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for operator 3
70	KVS scal Op4	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for operator 4
71	KVS scal Op5	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for operator 5
72	KVS scal Op6	-99...100 ⁽⁴⁾	Key velocity sensitivity multiplier for operator 6
73	Rat offs All	-99...99	EG rate offset for all operators
74	Rat offs Car	-99...99	EG rate offset for carriers
75	Rat offs Mod	-99...99	EG rate offset for modulators
76	Rat offs Op1	-99...99	EG rate offset for operator 1
77	Rat offs Op2	-99...99	EG rate offset for operator 2
78	Rat offs Op3	-99...99	EG rate offset for operator 3
79	Rat offs Op4	-99...99	EG rate offset for operator 4
80	Rat offs Op5	-99...99	EG rate offset for operator 5
81	Rat offs Op6	-99...99	EG rate offset for operator 6
82	Rat scal All	-99...100 ⁽⁴⁾	EG rate multiplier for all operators
83	Rat scal Car	-99...100 ⁽⁴⁾	EG rate multiplier for carriers
84	Rat scal Mod	-99...100 ⁽⁴⁾	EG rate multiplier for modulators
85	Rat scal Op1	-99...100 ⁽⁴⁾	EG rate multiplier for operator 1
86	Rat scal Op2	-99...100 ⁽⁴⁾	EG rate multiplier for operator 2

87	Rat scal Op3	-99...100 ⁽⁴⁾	EG rate multiplier for operator 3
88	Rat scal Op4	-99...100 ⁽⁴⁾	EG rate multiplier for operator 4
89	Rat scal Op5	-99...100 ⁽⁴⁾	EG rate multiplier for operator 5
90	Rat scal Op6	-99...100 ⁽⁴⁾	EG rate multiplier for operator 6
91	KRS offs All	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for all operators
92	KRS offs Car	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for carriers
93	KRS offs Mod	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for modulators
94	KRS offs Op1	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for operator 1
95	KRS offs Op2	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for operator 2
96	KRS offs Op3	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for operator 3
97	KRS offs Op4	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for operator 4
98	KRS offs Op5	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for operator 5
99	KRS offs Op6	-99...100 ⁽³⁾	Keyboard EG rate scaling offset for operator 6
100	KRS scal All	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for all operators
101	KRS scal Car	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for carriers
102	KRS scal Mod	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for modulators
103	KRS scal Op1	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for operator 1
104	KRS scal Op2	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for operator 2
105	KRS scal Op3	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for operator 3
106	KRS scal Op4	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for operator 4
107	KRS scal Op5	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for operator 5
108	KRS scal Op6	-99...100 ⁽⁴⁾	Keyboard EG rate multiplier for operator 6
109	Det offs All	-99...100 ⁽⁷⁾	Detune offset in cents for all operators
110	Det offs Car	-99...100 ⁽⁷⁾	Detune offset in cents for carriers
111	Det offs Mod	-99...100 ⁽⁷⁾	Detune offset in cents for modulators
112	Det offs Op1	-99...100 ⁽⁷⁾	Detune offset in cents for operator 1
113	Det offs Op2	-99...100 ⁽⁷⁾	Detune offset in cents for operator 2
114	Det offs Op3	-99...100 ⁽⁷⁾	Detune offset in cents for operator 3
115	Det offs Op4	-99...100 ⁽⁷⁾	Detune offset in cents for operator 4
116	Det offs Op5	-99...100 ⁽⁷⁾	Detune offset in cents for operator 5

117	Det offs Op6	-99...100 ⁽⁷⁾	Detune offset in cents for operator 6
118	Det scal All	-99...100 ⁽⁴⁾	Detune multiplier for all operators
119	Det scal Car	-99...100 ⁽⁴⁾	Detune multiplier for carriers
120	Det scal Mod	-99...100 ⁽⁴⁾	Detune multiplier for modulators
121	Det scal Op1	-99...100 ⁽⁴⁾	Detune multiplier for operator 1
122	Det scal Op2	-99...100 ⁽⁴⁾	Detune multiplier for operator 2
123	Det scal Op3	-99...100 ⁽⁴⁾	Detune multiplier for operator 3
124	Det scal Op4	-99...100 ⁽⁴⁾	Detune multiplier for operator 4
125	Det scal Op5	-99...100 ⁽⁴⁾	Detune multiplier for operator 5
126	Det scal Op6	-99...100 ⁽⁴⁾	Detune multiplier for operator 6
127	Waveform C+M	-77...77 ⁽⁸⁾	Waveform offset for carriers and modulators
128	Waveform 1+2	-77...77 ⁽⁸⁾	Waveform offset for operators 1 and 2
129	Waveform 3+4	-77...77 ⁽⁸⁾	Waveform offset for operators 3 and 4
130	Waveform 5+6	-77...77 ⁽⁸⁾	Waveform offset for operators 5 and 6
131	Waveform Op1	-15...15	Waveform offset for operator 1
132	Waveform Op2	-15...15	Waveform offset for operator 2
133	Waveform Op3	-15...15	Waveform offset for operator 3
134	Waveform Op4	-15...15	Waveform offset for operator 4
135	Waveform Op5	-15...15	Waveform offset for operator 5
136	Waveform Op6	-15...15	Waveform offset for operator 6

⁽¹⁾ : 0...100 with the step of 1 when assigned to the oscillator parameter,
0..127 with the step of 0.125 when assigned to the Shape or Alt (Shift + Shape)

⁽²⁾ : semitones / notes

⁽³⁾ : -6.93...+7 with the step of 0.07

⁽⁴⁾ : x0.01...x2 multiplier with the step of 0.01

⁽⁵⁾ : 0 - keep voice feedback route

higher digit - feedback source operator, 1...6 (0→1, 7...9→6)

lower digit - feedback destination operator, 1...6 (0→1, 7...9→6)

⁽⁶⁾ : 0 - keep voice algorithm

1...85 - set algorithm explicitly

⁽⁷⁾ : cents

⁽⁸⁾ : higher digit - carriers and odd operators,
lower digit - modulators and even operators

Known issues and limitations

- prologue and minilogue XD synthesizers can produce distorted sound or hang when LFO is routed to the Shape. This is due to high CPU utilization of the oscillator and additional CPU load produced by the firmware code for the Shape LFO. To restore normal operation the synthesizer power cycle is needed.
- NTS-1 can produce distorted sound when more than 2 effects are enabled. This is due to high CPU utilization of the oscillator and shared CPU architecture of the NTS-1. Disable excessive effects to get normal sound from the oscillator.
- On prologue, restoring the assigned parameter value with program recall is only valid in case Shape assign is assigned to the Alt (Shift + Shape) due to a parameter initialization order of the current firmware. On minilogue XD in opposite, this is the only combination that won't restore the value of the assigned parameter.
- Native Yamaha DX / TX series LFO, Amp and pitch modulations are not supported due to performance limitations.
- All ascending EG stages (e.x. typical Attack) are exponential. Implementing the reference semi-linear behaviour will introduce computational complexity that is not currently affordable.

Q & A

Q: Where to get voice banks?

A: Just search over the Internet for the Yamaha DX7 voice bank files.

Q: I got the voice bank, but the online constructor refuses it / voices sounds bad. What is the correct format?

A: Any VMEM packed voice bank for Yamaha DX1, DX5, DX7, DX7II, DX7s, TX7, TX802, TX816 both in SysEx (4104 bytes) or RAW (4096 bytes) will work. Any other format, including voice banks for Yamaha DX9, DX11, DX21, DX21, DX27s, DX100, TZ81Z will not work.

Q: Does the online constructor collect uploaded banks?

A: All the oscillator customization operations are done in JavaScript of your browser, so no actual upload occurs. Online constructor does not store any data, except for the your browser cookie setting of the last selected synthesizer model.

Q: There is a FM48 custom oscillator available, why is it not covered with this manual?

A: FM48 is oscillator variation for 4-operator Yamaha DX / TX series synthesizer voices. It is still experimental and very inaccurate.

Q: I found the bug / wish to propose a new feature or improvement. How can I report it?

A: Please create a new issue at [GitHub](#) or if you don't have a GitHub account, just send me an email to dukesrg@gmail.com.

Q: Is this oscillator free? / Is this an open beta version? / How much will it cost?

A: This oscillator is my hobby, it is and will be free and open source. If you're still itching about using this oscillator for free, you can [PayPal me](#) a pint of cider.